

0030101441

SCRATCH-BAG - BLACK

The Zomo Scratch-Bag is a small but very diverse additional bag, that can be clipped onto a recordbag (or any other bag) with a removable shoulder strap. An extra shoulder strap and a belt are also included. The Scratch-Bag can be worn like a hippack, over your shoulder or attached to a DJ-bag. The bag has enough space for either headphones, a Final Scratch Amplifier or other useful equipment. Sheer genius and totally cool! It's Zomo!



0030101441

SCRATCH-BAG - BLACK

PRODUCT DETAILS

KEY FEATURES

Material: 100% Nylon -1680 D Nylon

Capacity: 1 headphones and small accessories

Dimensions: 180 x 80 mm

Weight: 440g